




NOTE:  
 1. CONDUIT RISER SHALL BE MATED TO METER BASE WITH AN APPROPRIATELY SIZED THREADED MALE ADAPTER AND LOCKING RING.

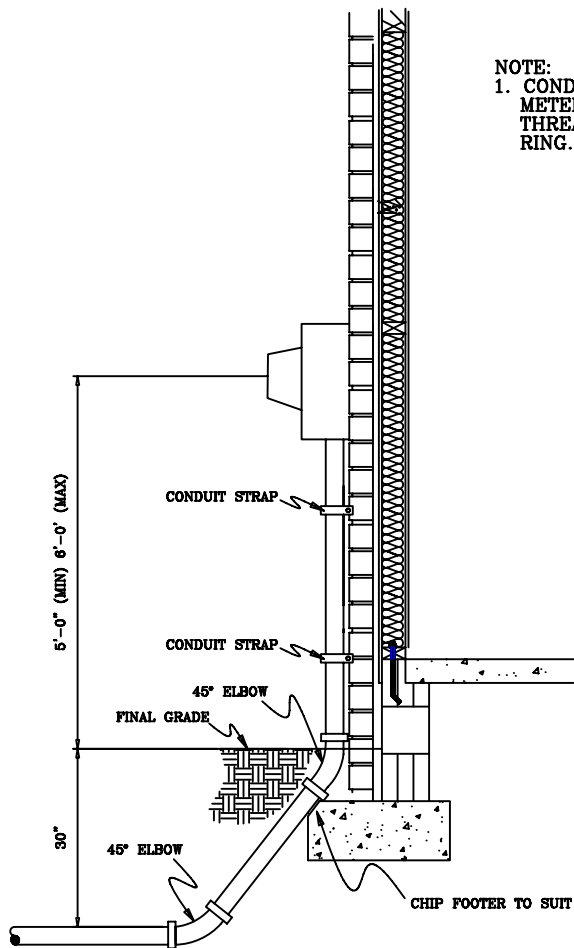

STANDARD INSTALLATION

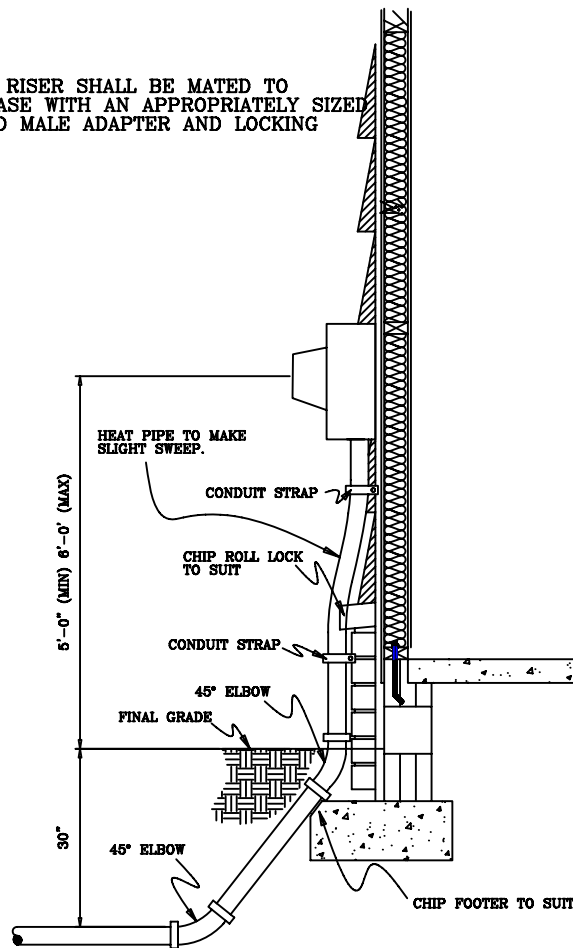

ALTERNATE ROLL LOCK INSTALLATION 1.

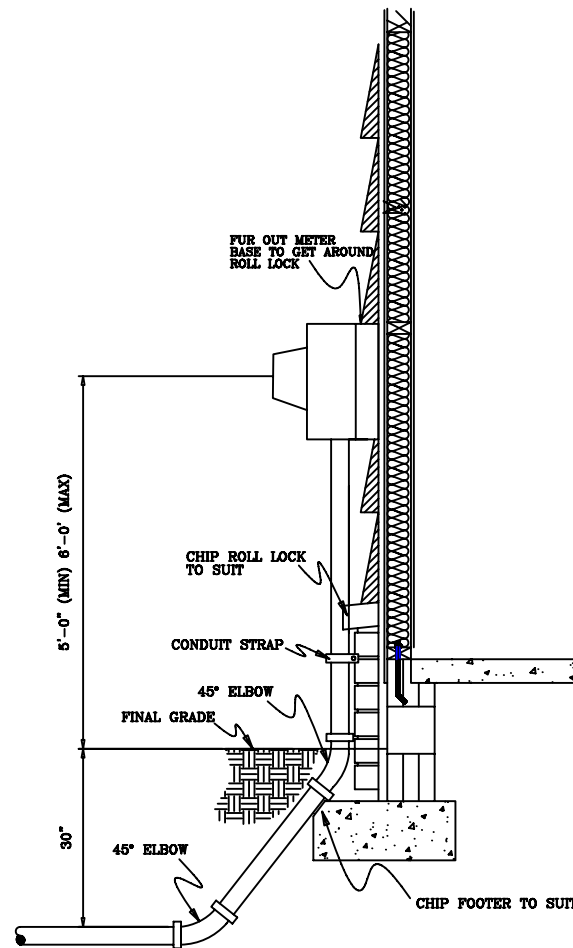

ALTERNATE ROLL LOCK INSTALLATION 2.

\* NOTE: USE 45° ELBOWS WITH FOOTER FOUNDATIONS  
 USE 90° ELBOWS WITH MONOLITHIC SLAB FOUNDATIONS



METER BASE INSTALLATION GUIDE DRAWING

REVISIONS

|                    |                       |          |  |  |
|--------------------|-----------------------|----------|--|--|
| DRAWN BY:<br>C J H | APPROVED BY:<br>J W M | FILE NO: |  |  |
| DATE:<br>06-07-06  | SCALE:<br>N T S       |          |  |  |